


Recessed Gripper Canopy

Low Voltage

21796 rB

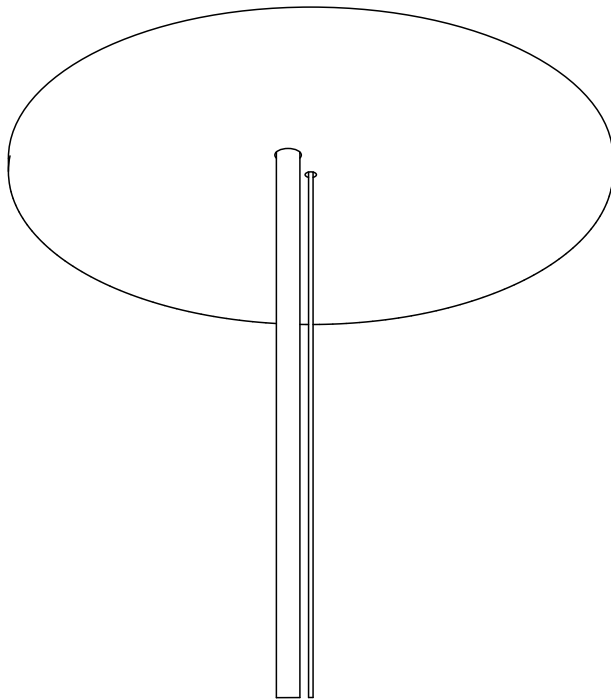

CAUTION:

Before starting, turn off power
at main circuit panel.

ADVERTENCIA:


Antes de comenzar la instalación,
apague la corriente en el tablero
principal.

ATTENTION:


Coupez l'alimentation avant de
procéder à l'installation.



Calling for backup? Scan above
to contact our team.

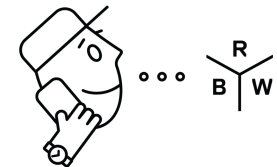


www.RBW.com
+1 212 388 0399
support@RBW.com
© 2023, RBW Studio LLC

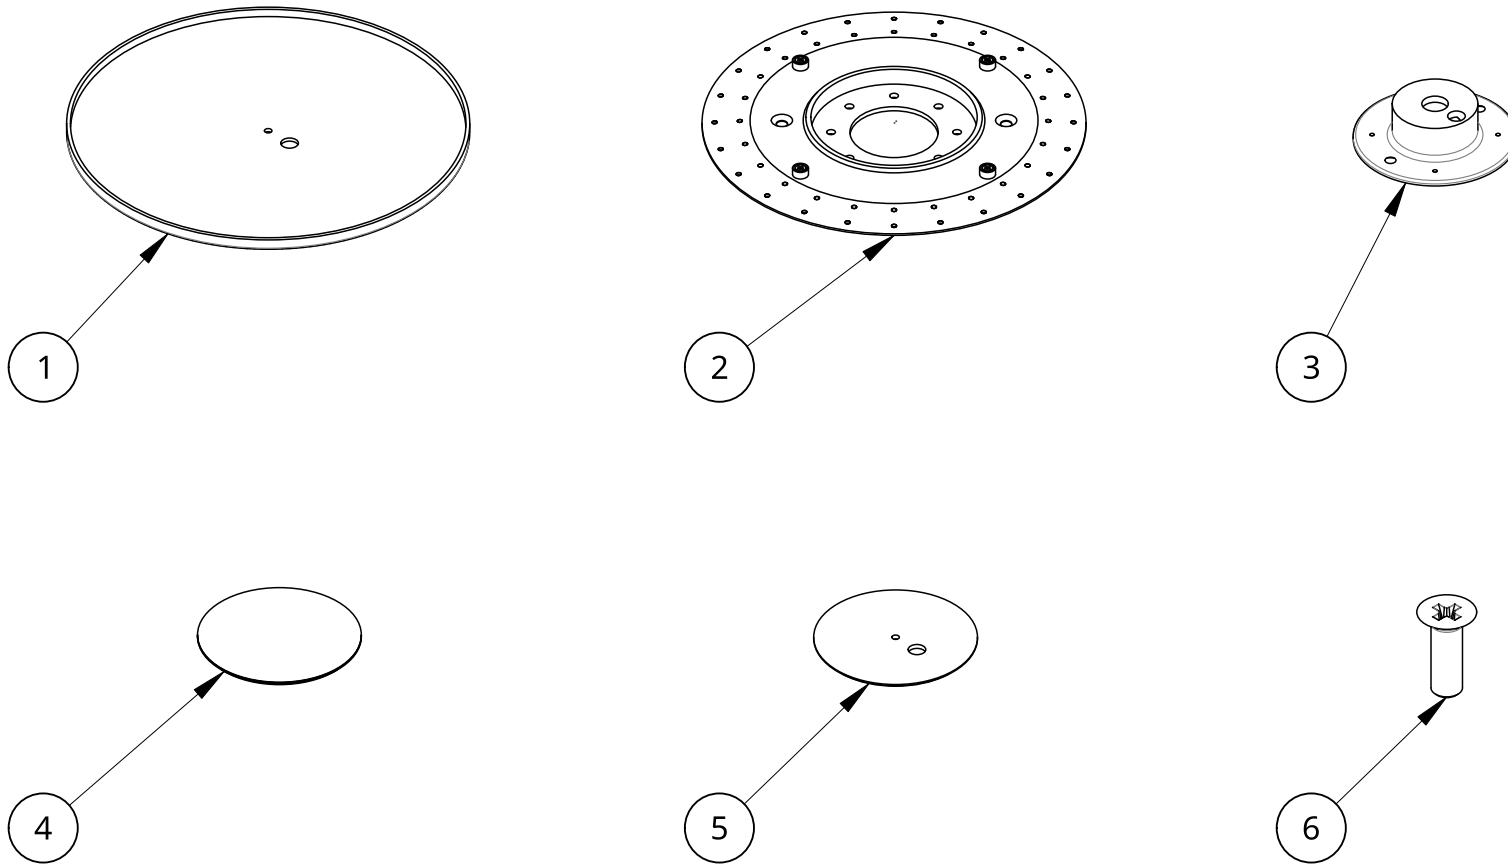


Item	Qty	Description
1	1	Gripper Canopy Face Plate
2	1	Recessed Canopy Plate with Magnets
3	1	Gripper Canopy Housing
4	1	Recessed Hole Cover with Puncture Sticker
5	1	Recessed Gripper Cover
6	4	Flat Head (100) machine screw #8-32 x 0.5" Steel

Recessed Canopy Instructions

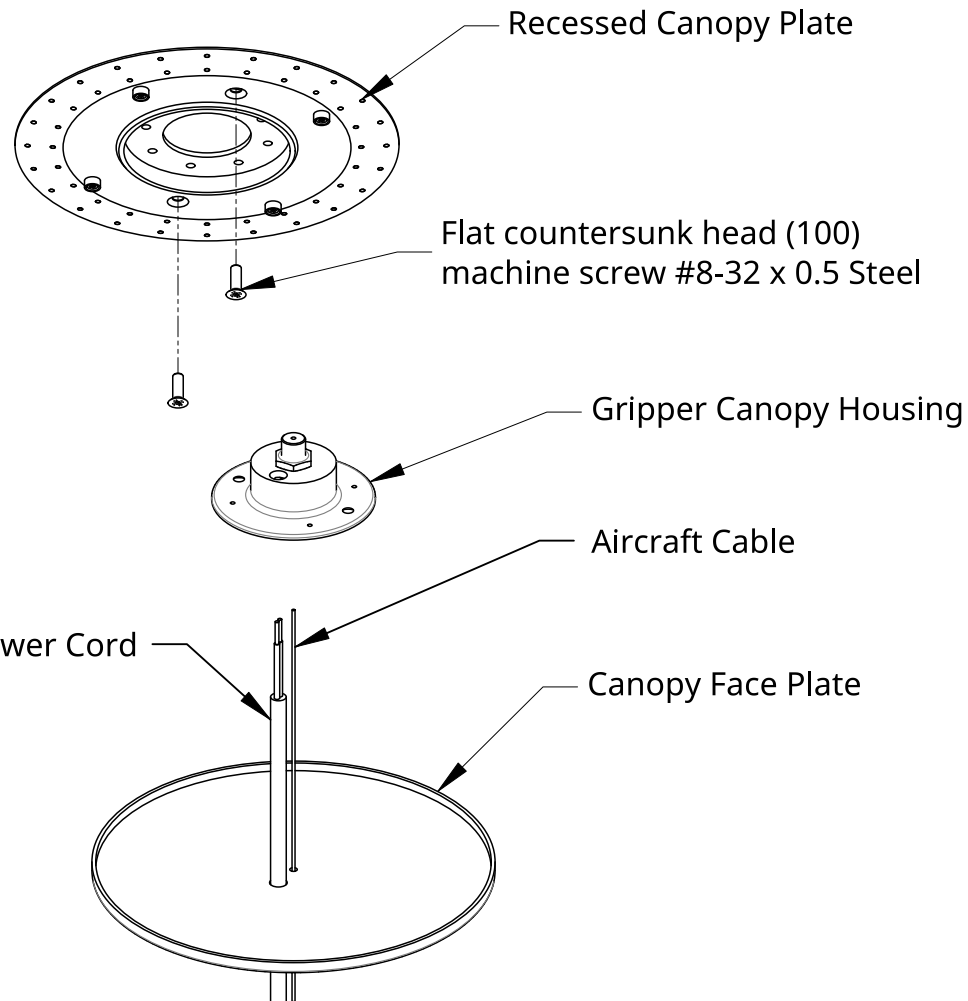

Installation - Recessed Canopy Plate & Cord Grip



1. Raise Recessed Canopy Plate up to desired mounting location.
2. Secure with two #8-32 Flat head screws.
3. Slide Canopy Face Plate over Power Cord and Cable.
4. Secure Power Cord in Gripper Canopy Housing by tying a knot in the cord above the housing (Leave enough wire to make electrical connections).
5. Feed Aircraft Cable through Cable Gripper and adjust to desired length (Leave 25mm above Gripper).

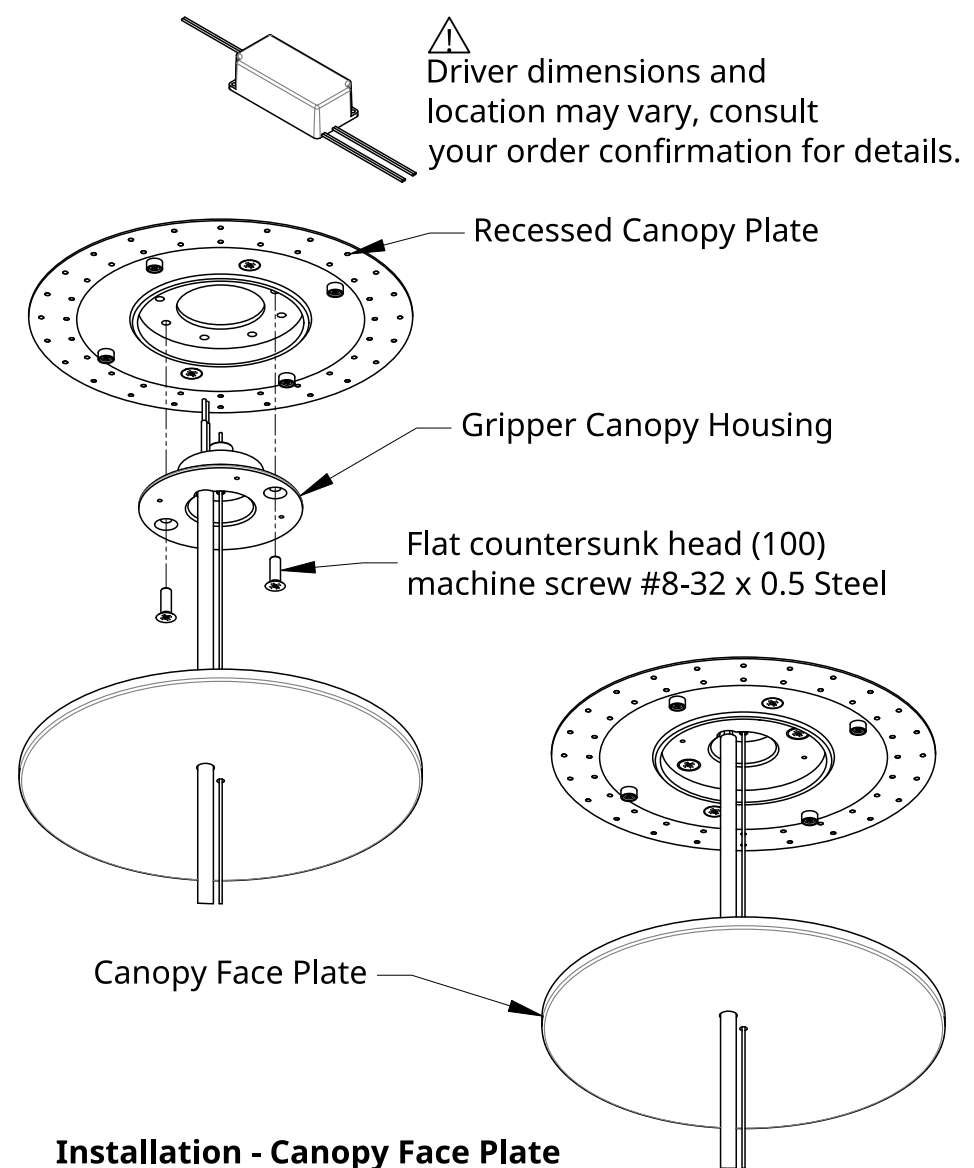

Installation - Canopy Face Plate



6. Connect SVT Red Lead (+) and Black Lead (-) to low voltage leads from externally located driver.
7. Raise Canopy Cord Grip to Recessed Canopy Plate and secure with #8-32 Flat head screws.
8. Raise Canopy Face Plate to Recessed Canopy Plate so magnets secure the Face Plate.

Mud-In Canopy Instructions

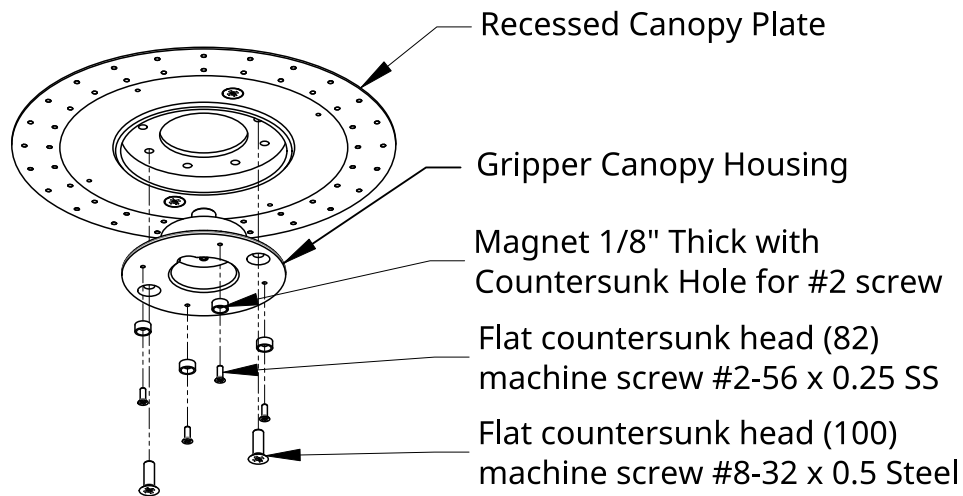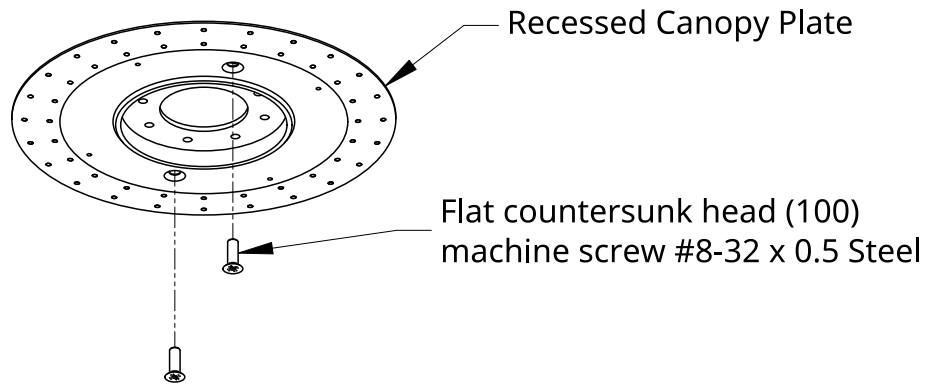

Installation - Recessed Canopy Plate & Cord Grip


1. Start by removing Magnets and #2-56 Flat head Screws from their pre-installed location.
2. Raise Recessed Canopy Plate up to desired mounting location.
3. Secure with two #8-32 Flat head screws.
4. Fasten #2 Magnets to Gripper Canopy Housing with #2-56 Flat head Screws.
5. Secure Cord Grip to Recessed Canopy Plate with #8-32 Flat Head Screws.

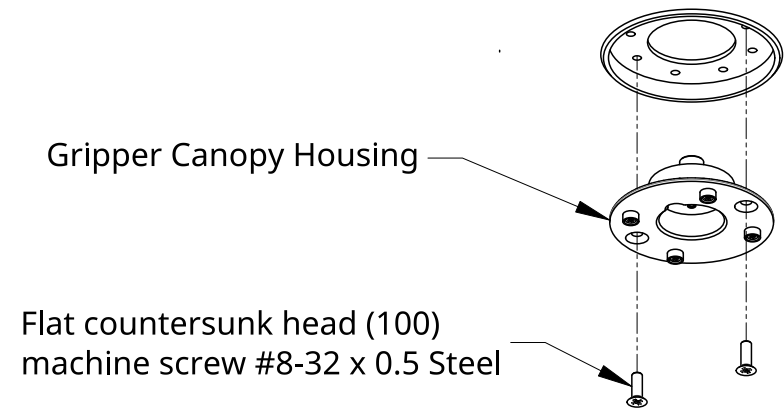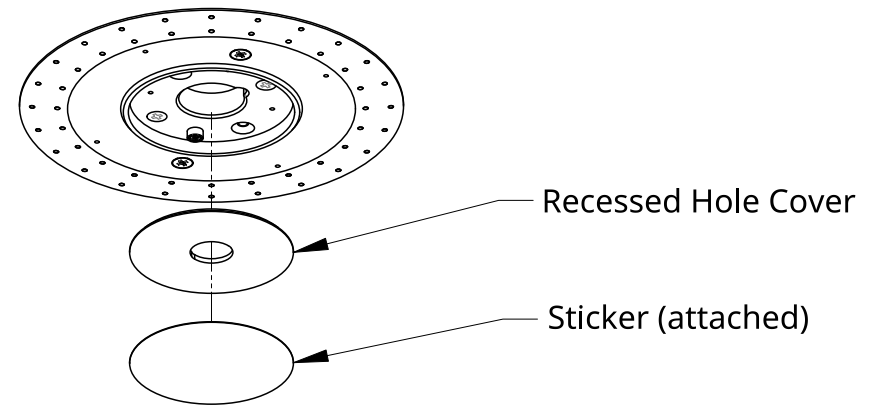

Installation - Hole Cover


6. Raise Hole Cover to Recessed Canopy Plate so magnets secure the Hole Cover.
7. Apply Spackle to cover Recessed Canopy Plate.
8. Once Spackle is dried, sanded smooth and painted, puncture center of Sticker to remove Hole Cover.
9. Remove #8-32 Screws to remove Cord Grip assembly.

Mud-In Canopy Instructions

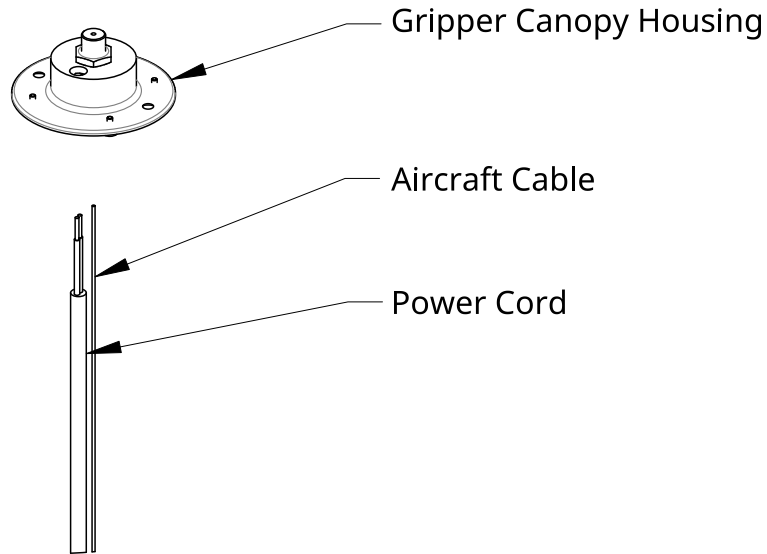


Installation - Cord Grip

10. Slide Canopy Face Plate over Power Cord and Cable.
11. Secure Power Cord in Gripper Canopy Housing by tying a knot in the cord above the housing (Leave enough wire to make electrical connections).
12. Feed Aircraft Cable through Cable Gripper and adjust to desired length (Leave 25mm above Gripper).

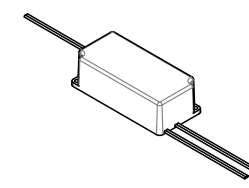

⚠ Driver dimensions and location may vary, consult your order confirmation for details.

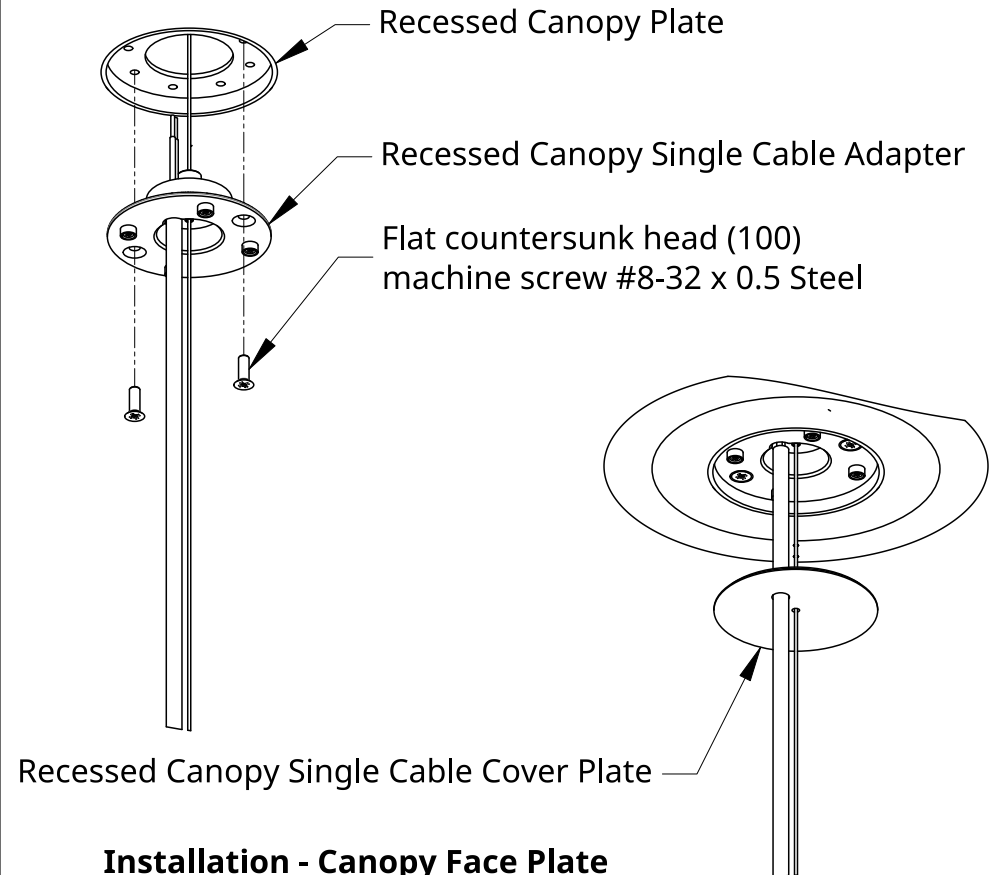

Installation - Canopy Face Plate

13. Connect SVT Red Lead (+) and Black Lead (-) to corresponding low voltage leads from externally located driver.
14. Raise Canopy Cord Grip assembly to Reccessed Canopy Plate and secure with #8-32 Flat head Screws.
15. Raise Canopy Cover to Reccessed Canopy Plate so magnets secure the Canopy Cover.
16. Congratulations! End of guide.