




Highline

18411 rC

Low Voltage Input

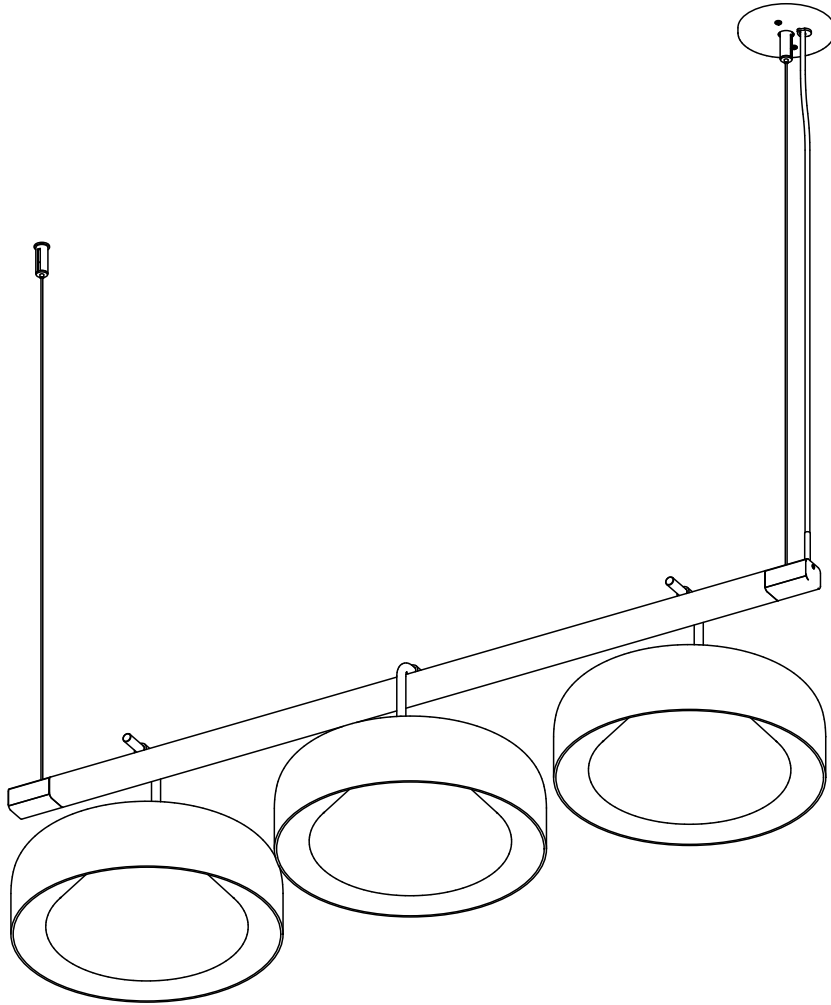

INSTALLATION INSTRUCTIONS

READ ALL OF THESE INSTALLATION INSTRUCTIONS BEFORE
INSTALLING THE TRACK SYSTEM.

SAVE THESE INSTRUCTIONS AND REFER TO THEM WHEN ADDITIONS TO OR
CHANGES IN THE TRACK CONFIGURATION ARE MADE.

THE TRACK SYSTEM IS NOT INTENDED FOR USE WITH A POWER SUPPLY CORD
OR CONVENIENCE RECEPTACLE ADAPTOR.

CAUTION:

Before starting, turn off power at main
circuit panel.

ADVERTENCIA:



Antes de comenzar la instalación, apague la
corriente en el tablero principal.

ATTENTION:


Coupez l'alimentation avant de
procéder à l'installation.




Calling for backup? Scan above to
contact our team.

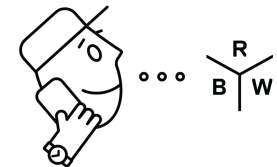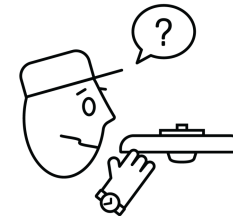


www.RBW.com
+1 212 388 0399
support@RBW.com
© 2023, RBW Studio LLC

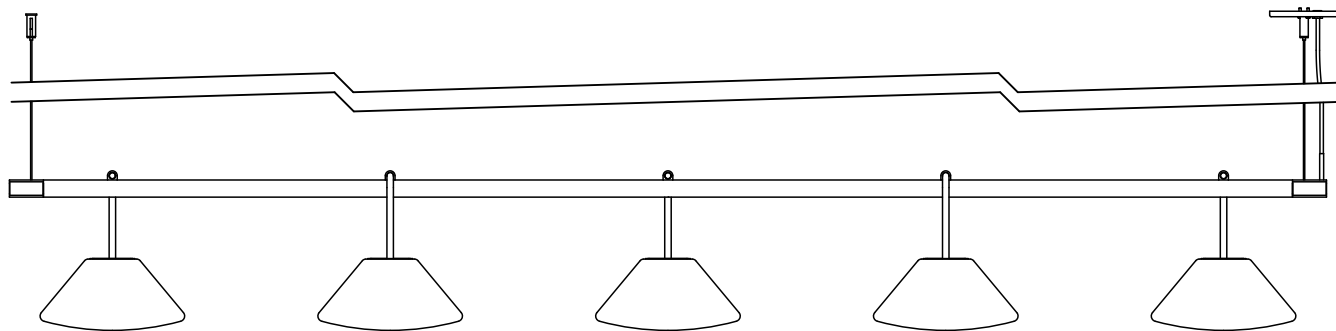


HL-8-1-1-1-1-N

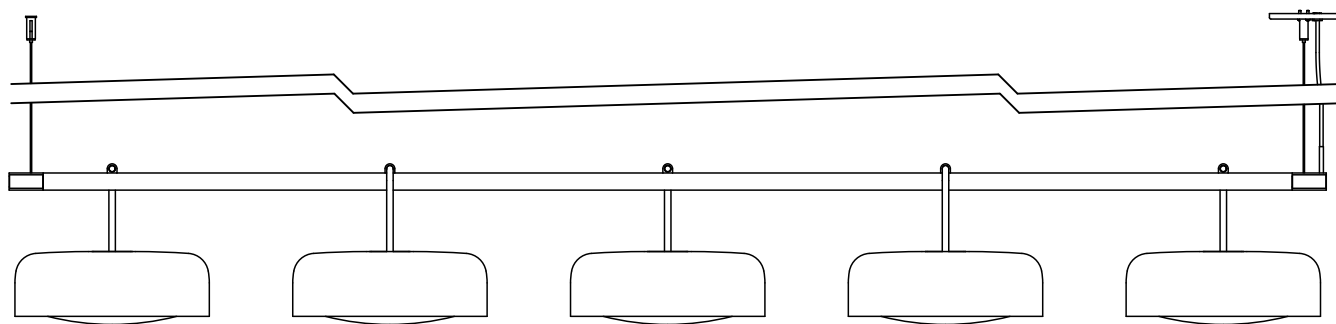


HL-8-2-2-2-2-N

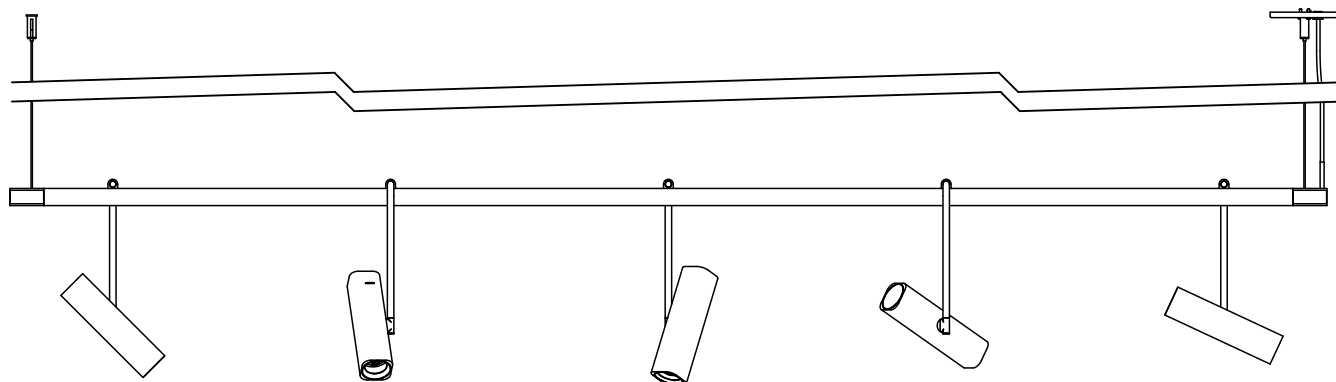


HL-8-3-3-3-3-N

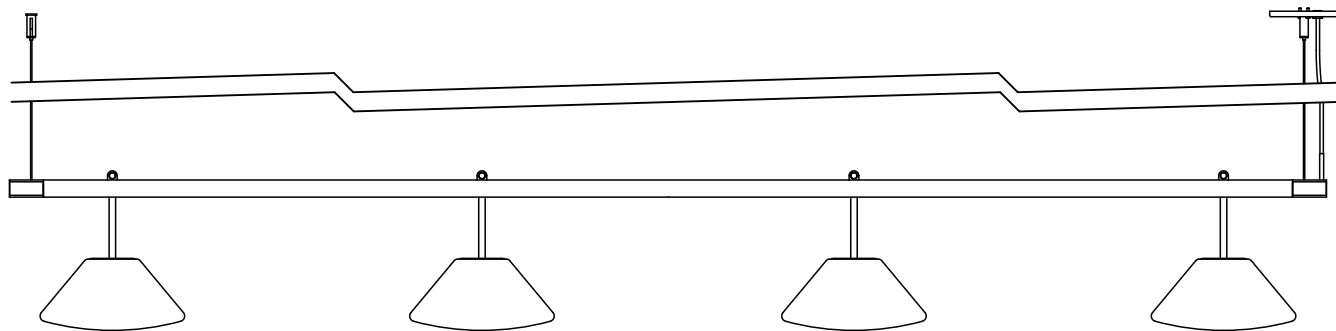


HL-8-1-1-1-1-N

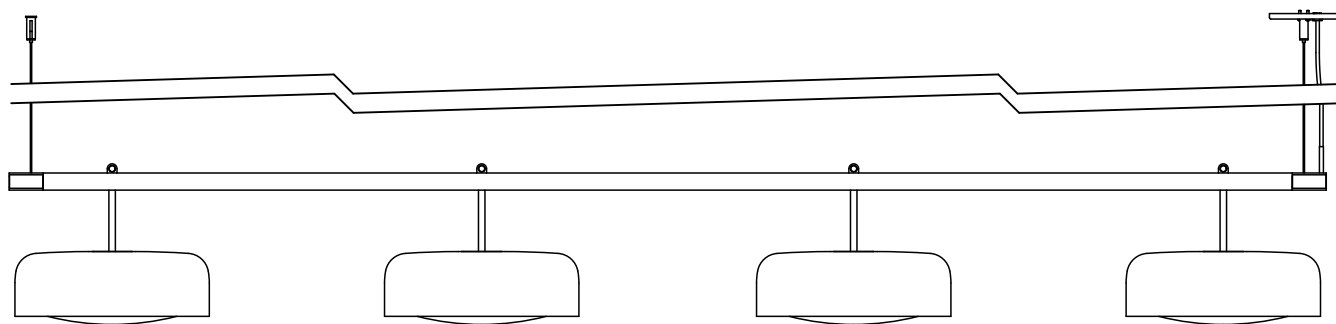


HL-8-2-2-2-2-N

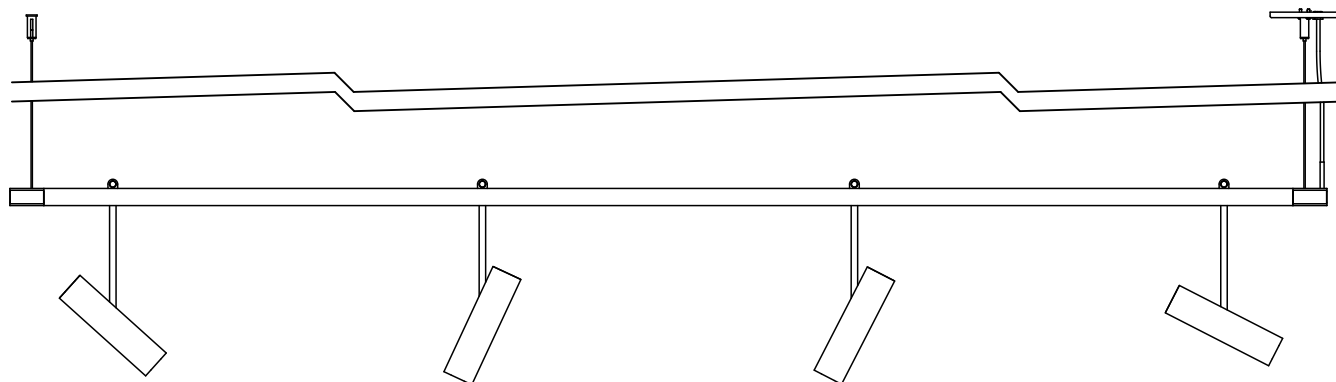


HL-8-3-3-3-3-N

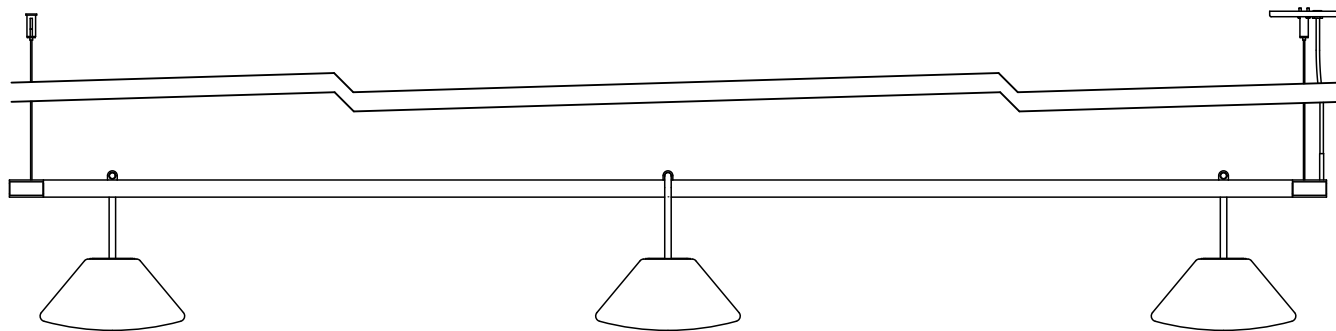


HL-8-1-1-1-N

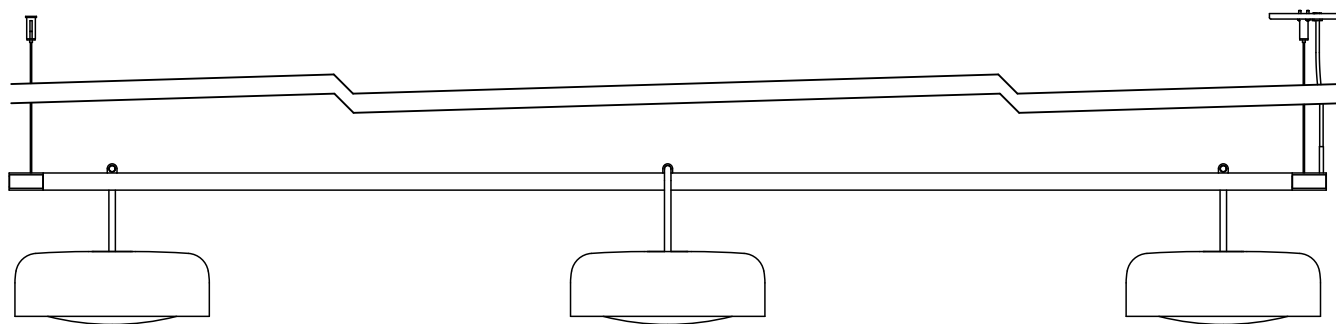


HL-8-2-2-2-N

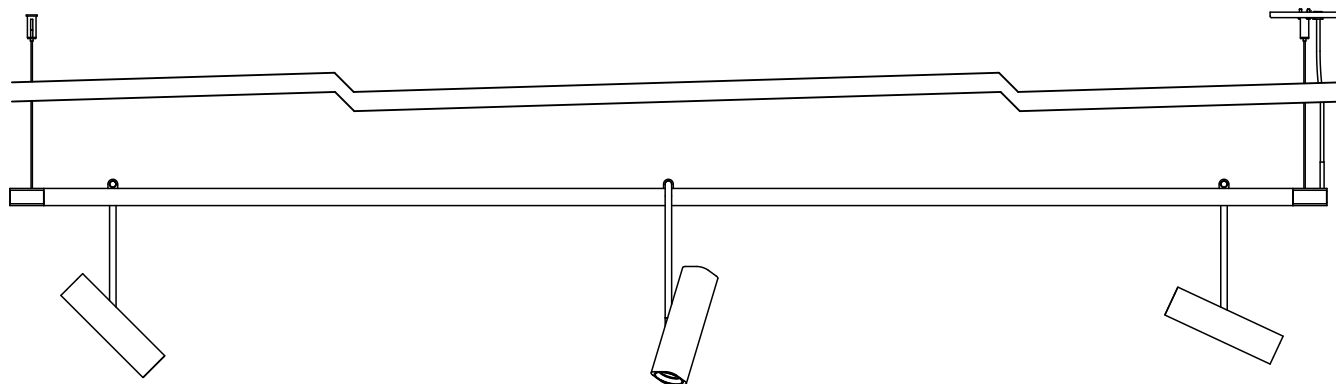


HL-8-3-3-3-N

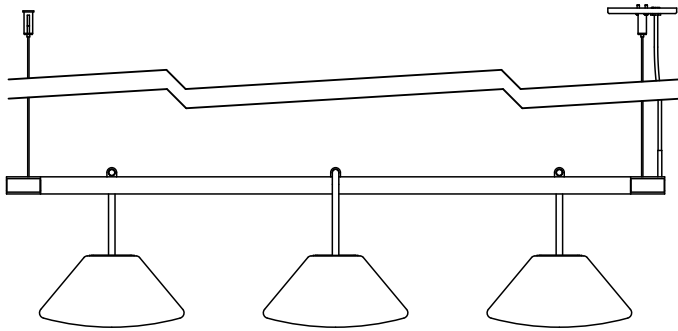


HL-4-1-1-1-N

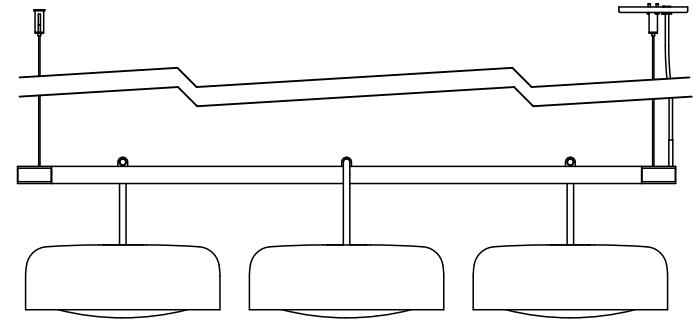


HL-4-2-2-2-N

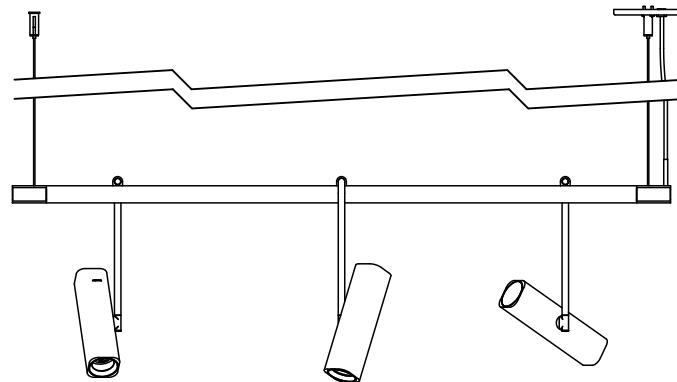


HL-4-3-3-3-N

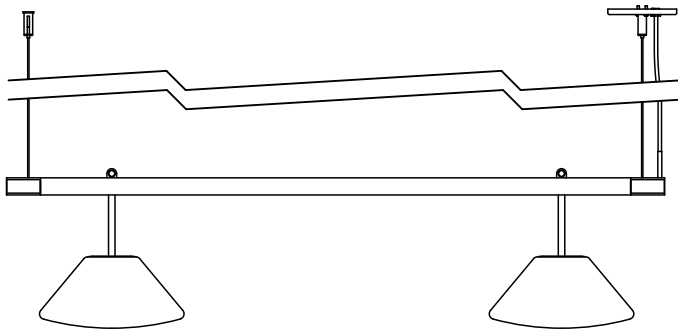

HL-4-1-1-N

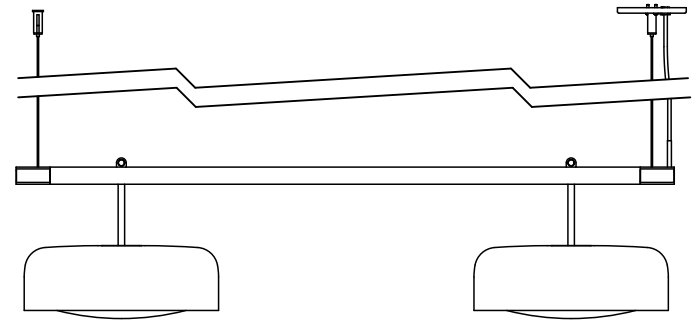


HL-4-2-2-N

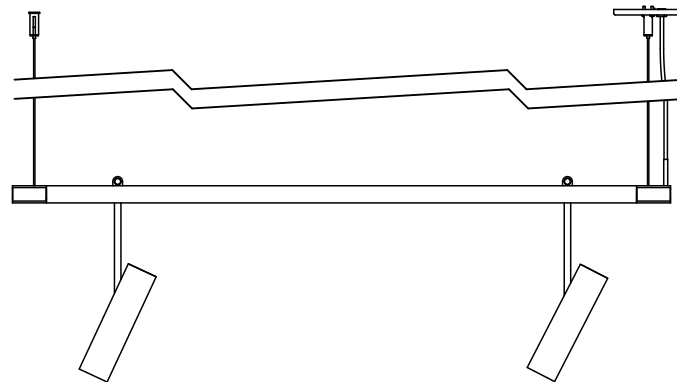


HL-4-3-3-N

FOR USE WITH RBW HIGHLINE TRACK SYSTEM ONLY



What's Included: Assemblies May Vary Based on Configuration

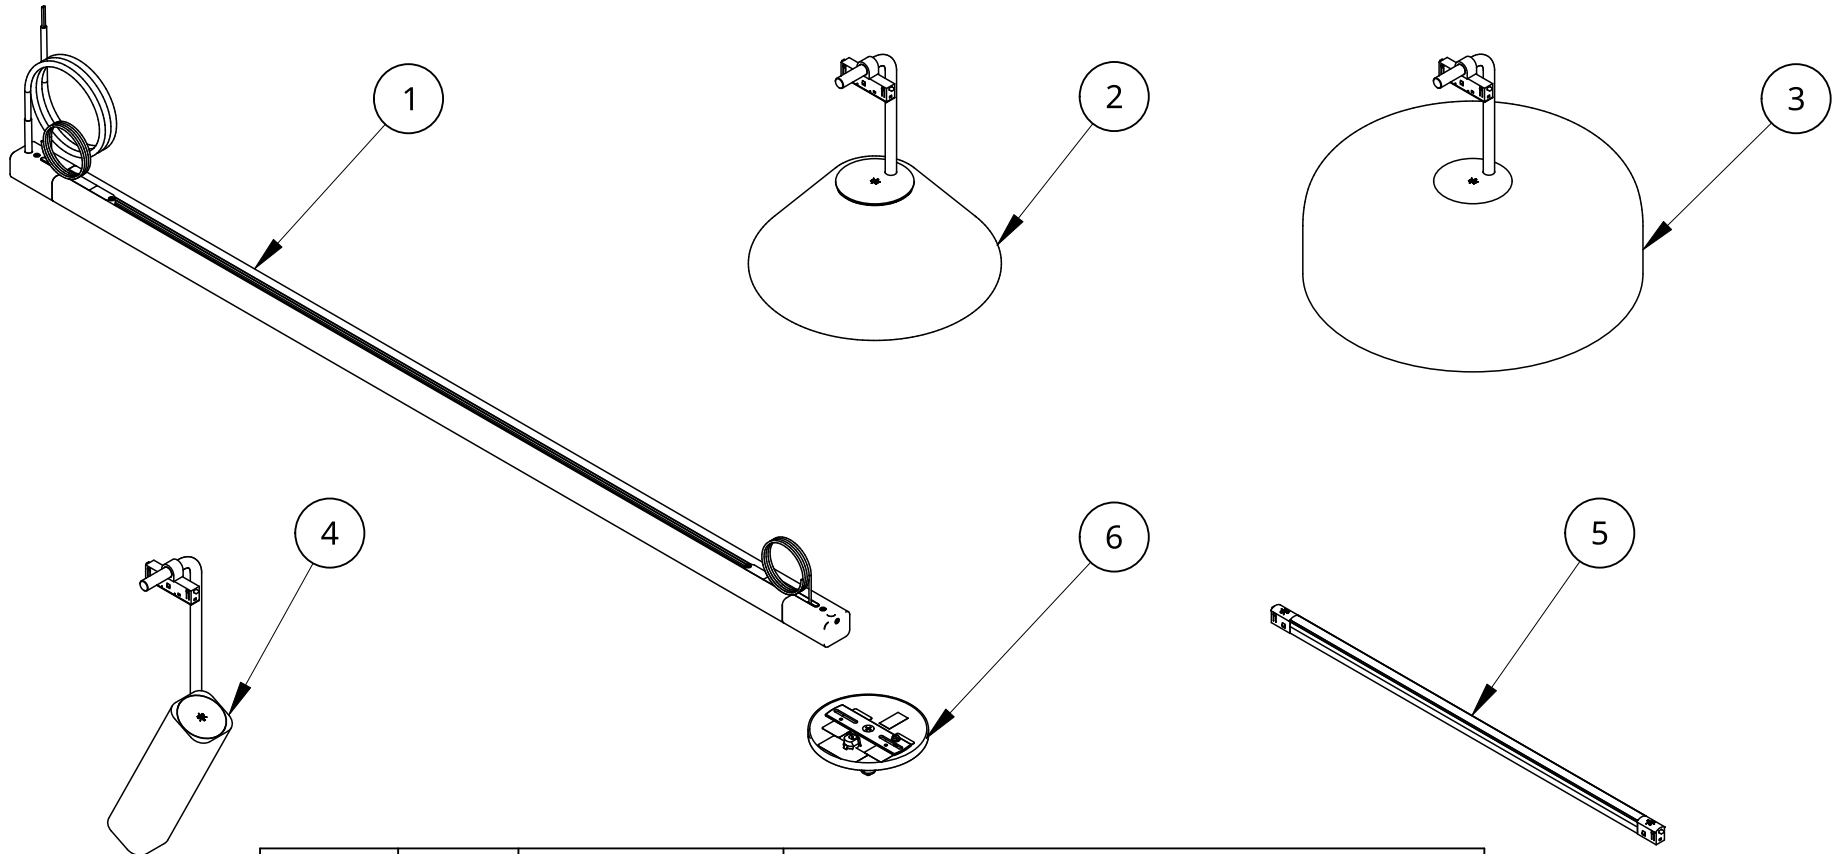

Item	Qty	Part number	Description
1	1	17988	Package: Highline. Track. 4ft
2	1	18288-27	Package: Highline. Cone Light. 2700K
3	1	17980	Package: Highline. Felt Cone
4	1	18366-27	Package: Highline. Spot Light. 2700K
5	1	17979-27	Package: Highline. Uplight. 2700K
6	1	18533	Package: Canopy. Flat Round Cable Gripper. 3/32" Cable - UL 1574

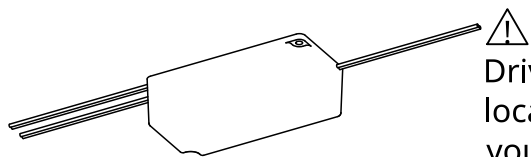


Driver dimensions and location may vary, consult your order confirmation for details. Driver must be installed into suitable enclosure. See Driver spec sheet for details.

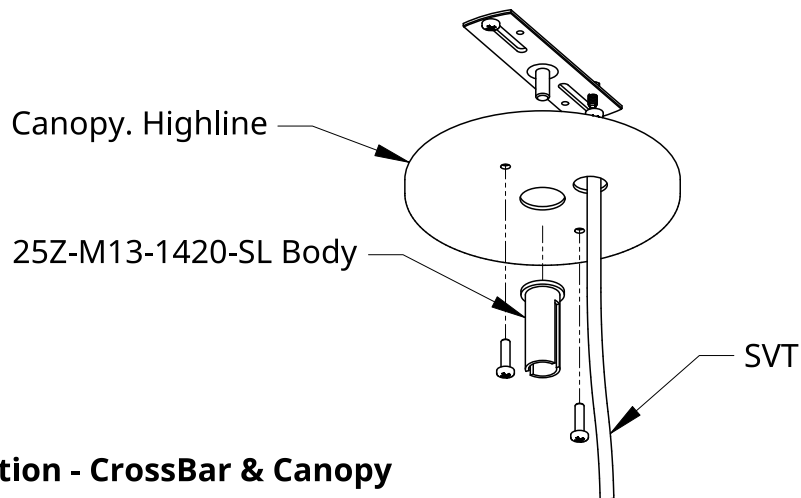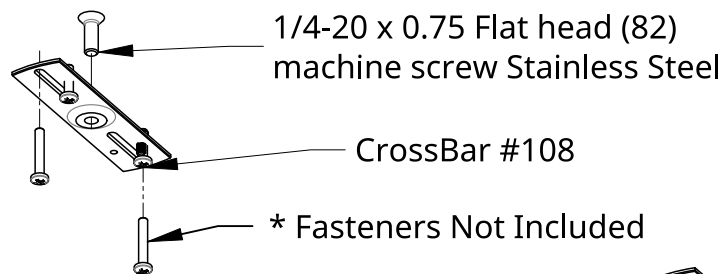

Installation - CrossBar & Canopy

1. Thread 1/4-20 Fastener through tapped center hole of CrossBar #108.
2. Fasten CrossBar #108 to junction box.
3. Fasten 25Z-M13-1420-SL Body to 1/4-20 Fastener in Crossbar #108.
4. Pass SVT through hole in Canopy, trim and strip excess cord.
5. Connect Red (+) and Black (-) leads to low voltage leads from externally located driver.
6. Raise Canopy up to CrossBar and fasten via 8-32 x 5/8" screws.

NOTE: Fixture must be fully supported until aircraft cable is securely fastened in both cable grippers.

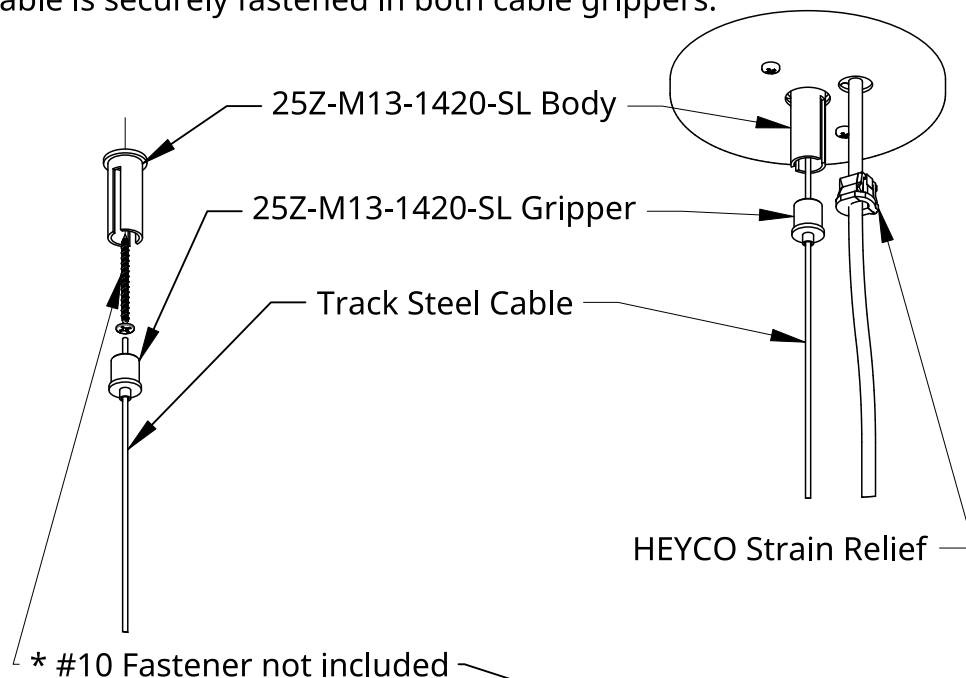

Surface	Recommended Fastener
Stud-Backed Drywall	#8 Drywall Screw
Concrete Slab	1/4-20 Expanding Anchor
Wood	#8 Wood Screw

Installation - Grippers

7. Thread 25Z-M13-1420-SL Gripper clockwise into 25Z-M13-1420-SL Body.
8. Feed Track Steel Cable into Gripper and guide excess cable out of Body.
9. Locate hang point on opposite end of fixture.
10. Fasten 25Z-M13-1420-SL Body to desired mounting surface.
11. Repeat steps 7-8
12. Snap Strain Relief onto SVT at desired height and snap into Canopy.